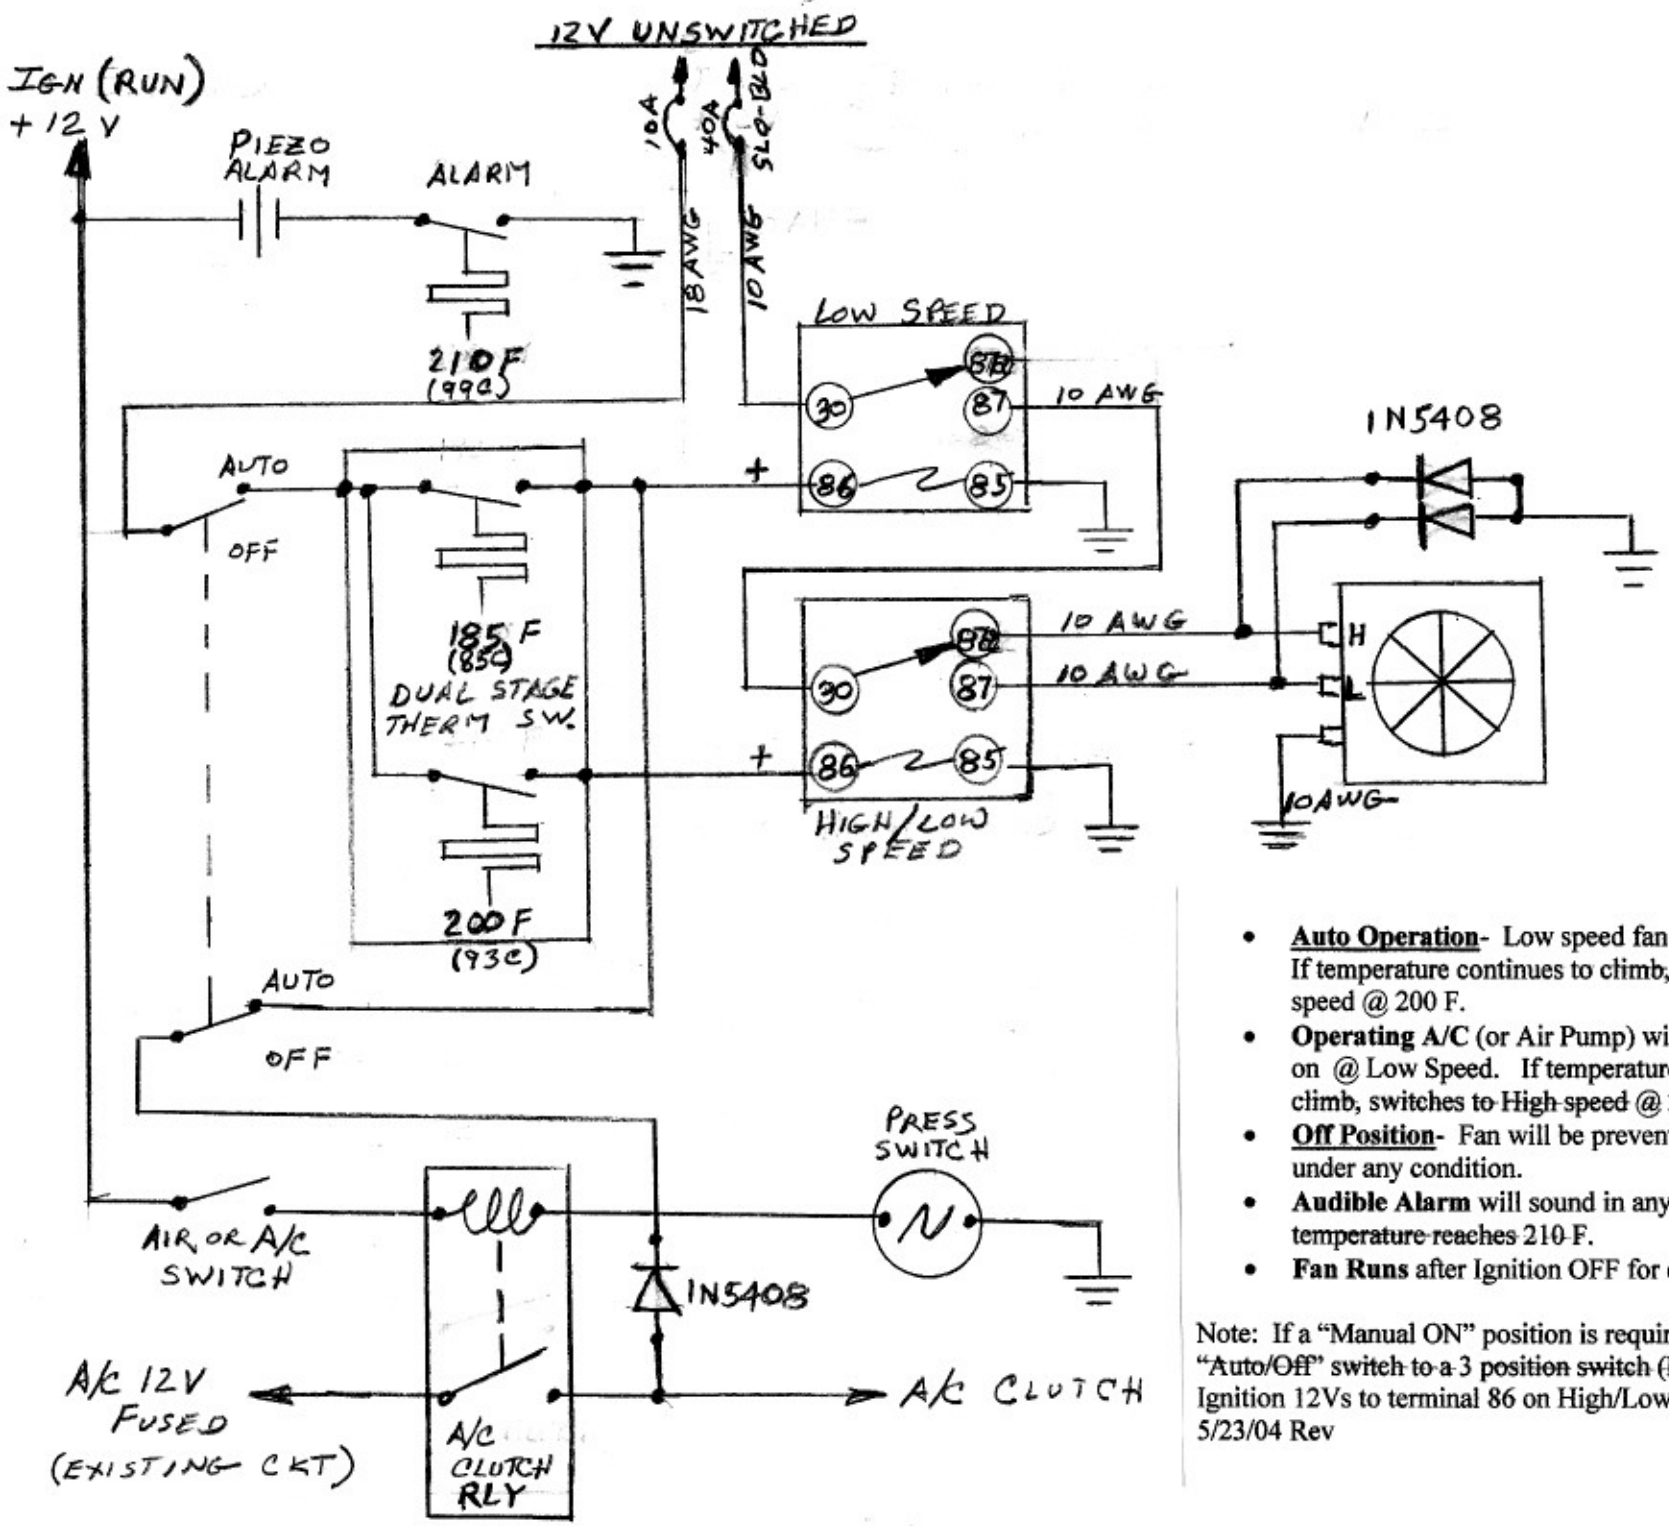


- **Auto Operation**- Low speed fan turns on @ 185 F. If temperature continues to climb, switches to ~~High~~ speed @ 200 F.
- **Operating A/C** (or Air Pump) will force Fan to turn on @ Low Speed. If temperature continues to climb, switches to ~~High speed~~ @ ~~200~~ F.
- **Off Position**- Fan will be prevented from running under any condition.
- **Audible Alarm** will sound in any switch position if ~~temperature reaches 210 F~~.
- **Fan Runs** after Ignition OFF for engine cool down.

Note: If a "Manual ON" position is required, change the ~~"Auto/Off" switch to a 3 position switch (DPST)~~ and wire Ignition 12Vs to terminal 86 on High/Low Speed relay.
5/23/04 Rev