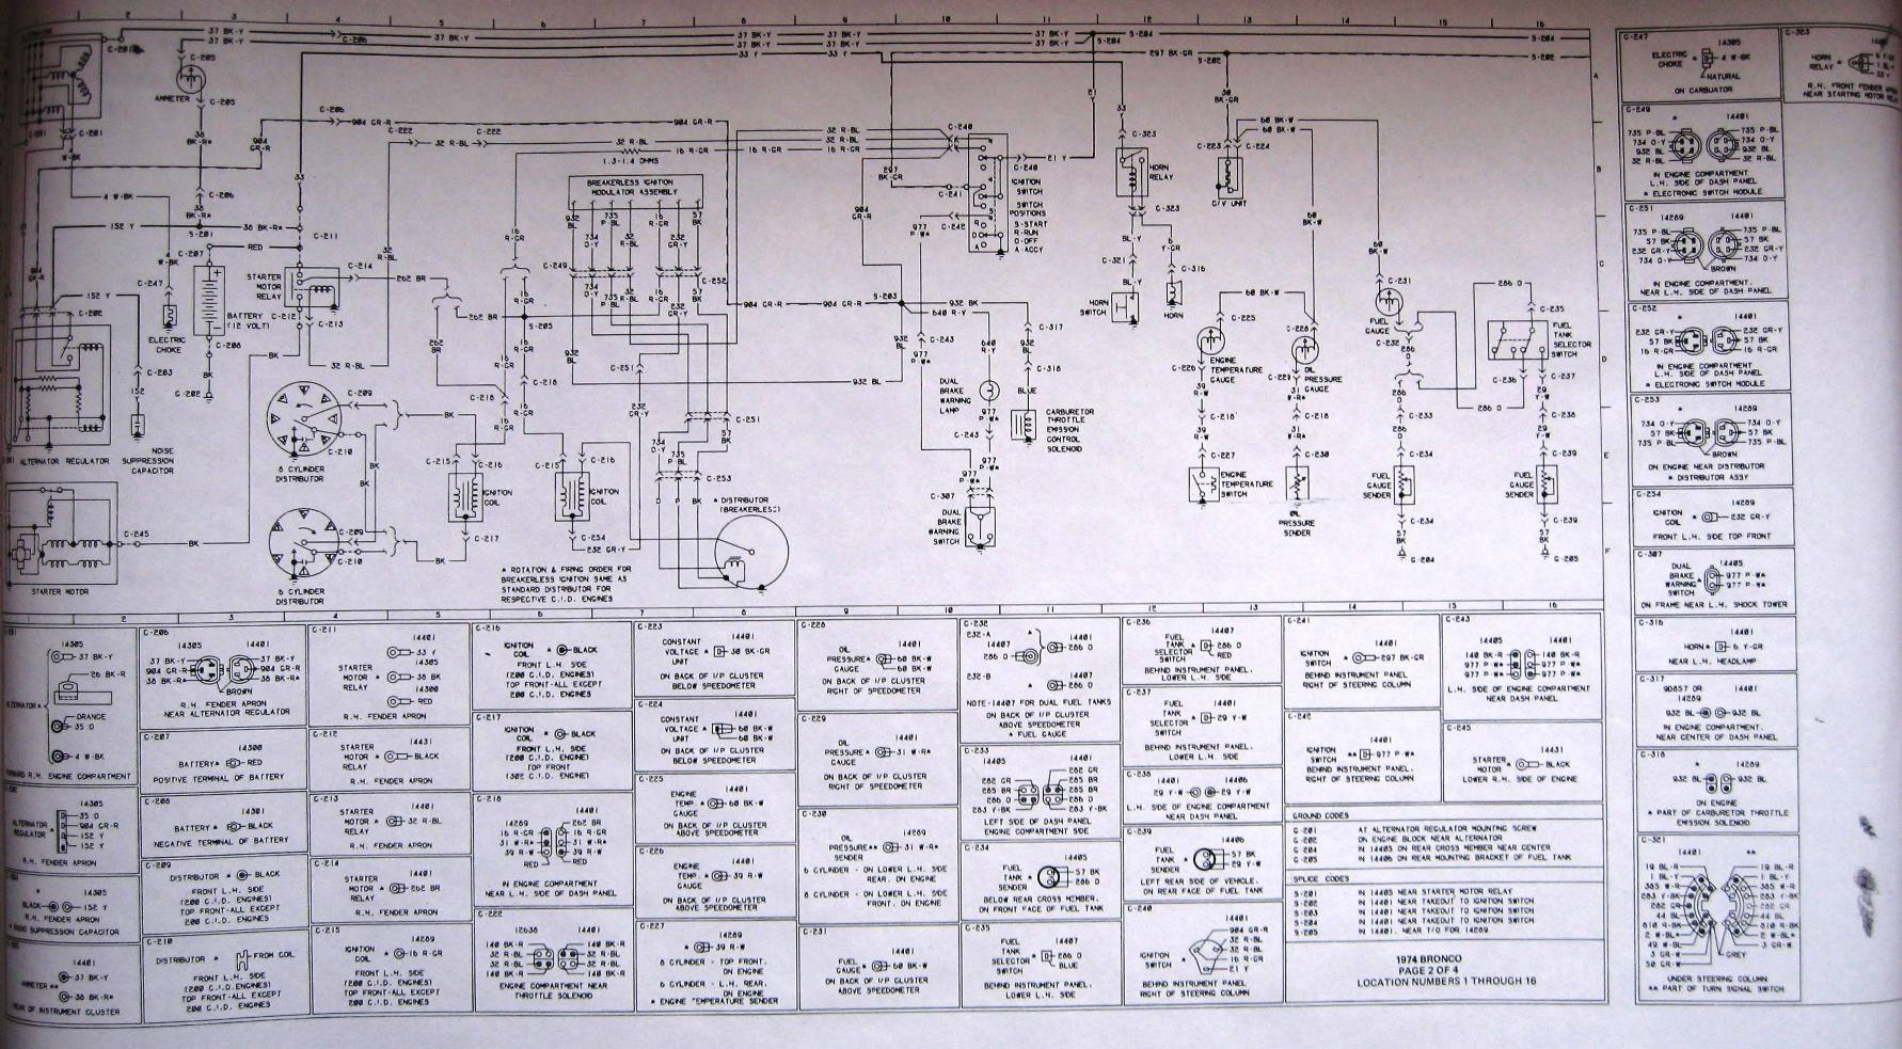

AMMETER
BATTERY (12 VOLT)
STARTER MOTOR RELAY
ELECTRIC CHOKE
NOISE SUPPRESSION CAPACITOR
ALTERNATOR REGULATOR
STARTER MOTOR
6 CYLINDER DISTRIBUTOR
8 CYLINDER DISTRIBUTOR
IGNITION COIL
BREAKERLESS IGNITION MODULATOR ASSEMBLY
1.3-1.4 OHMS
IGNITION SWITCH
SWITCH POSITIONS
S-START
R-RUN
O-OFF
A ACCY
HORN RELAY
HORN SWITCH
HORN
C/V UNIT
ENGINE TEMPERATURE GAUGE
ENGINE TEMPERATURE SWITCH
OIL PRESSURE GAUGE
OIL PRESSURE SENDER
FUEL GAUGE
FUEL GAUGE SENDER
FUEL TANK SELECTOR SWITCH
DUAL BRAKE WARNING LAMP
DUAL BRAKE WARNING SWITCH
CARBURETOR THROTTLE EMISSION CONTROL SOLENOID
▲ DISTRIBUTOR (BREAKERLESS)
▲ ROTATION & FIRING ORDER FOR BREAKERLESS IGNITION SAME AS STANDARD DISTRIBUTOR FOR RESPECTIVE C.I.D. ENGINES
C-247 ELECTRIC CHOKE 14385 4 W-BK ▲ NATURAL ON CARBURETOR
C-323 HORN RELAY ▲ 14385 16 R-BL R.H. FRONT FENDER WELL NEAR STARTING MOTOR
C-249 ▲ 14401 735 P-BL 734 O-Y 932 BL 32 R-BL IN ENGINE COMPARTMENT L.H. SIDE OF DASH PANEL ▲ ELECTRONIC SWITCH MODULE
C-251 14289 14401 735 P-BL 57 BK 232 GR-Y 734 O-Y BROWN IN ENGINE COMPARTMENT NEAR L.H. SIDE OF DASH PANEL
C-252 ▲ 14401 232 GR-Y 57 BK 16 R-GR IN ENGINE COMPARTMENT L.H. SIDE OF DASH PANEL ▲ ELECTRONIC SWITCH MODULE
C-253 ▲ 14289 734 O-Y 57 BK 735 P-BL BROWN ON ENGINE NEAR DISTRIBUTOR ▲ DISTRIBUTOR ASSY
C-254 IGNITION COIL ▲ 14289 232 GR-Y FRONT L.H. SIDE TOP FRONT
C-307 DUAL BRAKE WARNING ▲ SWITCH 14405 977 P-W ▲ 977 P-W ON FRAME NEAR L.H. SHOCK TOWER
C-316 HORN ▲ 14401 16 Y-GR NEAR L.H. HEADLAMP
C-317 90857 OR 14289 932 BL 932 BL IN ENGINE COMPARTMENT NEAR CENTER OF DASH PANEL
C-318 ▲ 14289 932 BL 932 BL ON ENGINE ▲ PART OF CARBURETOR THROTTLE EMISSION SOLENOID
C-321 ▲▲ 14401 19 BL-R 1 BL-Y 383 W-R 283 Y-BK 232 GR 44 BL 810 R-BK 2 W-BL 42 W-BL 3 GR-W 58 GR-W GREY UNDER STEERING COLUMN ▲▲ PART OF TURN SIGNAL SWITCH
C-206 14385 14401 37 BK-Y 26 BK-R 36 BK-R BROWN R.H. FENDER APRON NEAR ALTERNATOR REGULATOR
C-211 14401 33 Y STARTER MOTOR RELAY 14385 36 BK STARTER MOTOR ▲ 14300 RED R.H. FENDER APRON
C-287 14300 BATTERY ▲ RED POSITIVE TERMINAL OF BATTERY
C-212 14431 STARTER MOTOR ▲ BLACK RELAY R.H. FENDER APRON
C-288 14381 BATTERY ▲ BLACK NEGATIVE TERMINAL OF BATTERY
C-213 14401 STARTER MOTOR ▲ 32 R-BL RELAY R.H. FENDER APRON
C-289 DISTRIBUTOR ▲ BLACK FRONT L.H. SIDE (288 C.I.D. ENGINES) TOP FRONT-ALL EXCEPT 288 C.I.D. ENGINES
C-214 14401 STARTER MOTOR ▲ 262 BR RELAY R.H. FENDER APRON
C-210 DISTRIBUTOR ▲ FROM COIL FRONT L.H. SIDE (288 C.I.D. ENGINES) TOP FRONT-ALL EXCEPT 288 C.I.D. ENGINES
C-215 14289 IGNITION COIL ▲ 16 R-GR FRONT L.H. SIDE (288 C.I.D. ENGINES) TOP FRONT-ALL EXCEPT 288 C.I.D. ENGINES
C-216 IGNITION COIL ▲ BLACK FRONT L.H. SIDE (288 C.I.D. ENGINES) TOP FRONT-ALL EXCEPT 288 C.I.D. ENGINES
C-217 IGNITION COIL ▲ BLACK FRONT L.H. SIDE (288 C.I.D. ENGINE) TOP FRONT (302 C.I.D. ENGINE)
C-218 14289 14401 262 BR 16 R-GR 31 W-RA 39 W-R RED RED IN ENGINE COMPARTMENT NEAR L.H. SIDE OF DASH PANEL
C-222 12636 14401 140 BK-R 32 R-BL 32 R-BL 140 BK-R 140 BK-R 32 R-BL 32 R-BL 140 BK-R ENGINE COMPARTMENT NEAR THROTTLE SOLENOID
C-223 CONSTANT VOLTAGE ▲ 14401 38 BK-GR UNIT ON BACK OF I/P CLUSTER BELOW SPEEDOMETER
C-224 CONSTANT VOLTAGE ▲ 14401 68 BK-W 68 BK-W UNIT ON BACK OF I/P CLUSTER BELOW SPEEDOMETER
C-225 ENGINE TEMP. ▲ 14401 68 BK-W GAUGE ON BACK OF I/P CLUSTER ABOVE SPEEDOMETER
C-226 ENGINE TEMP. ▲ 14401 39 R-W GAUGE ON BACK OF I/P CLUSTER ABOVE SPEEDOMETER
C-227 14289 ▲ 39 R-W 8 CYLINDER - TOP FRONT, ON ENGINE 8 CYLINDER - L.H. REAR, ON ENGINE ▲ ENGINE TEMPERATURE SENDER
C-228 OIL PRESSURE ▲ 14401 68 BK-W GAUGE ON BACK OF I/P CLUSTER RIGHT OF SPEEDOMETER
C-229 OIL PRESSURE ▲ 14401 31 W-RA GAUGE ON BACK OF I/P CLUSTER RIGHT OF SPEEDOMETER
C-230 OIL PRESSURE ▲▲ 14289 31 W-RA SENDER 6 CYLINDER - ON LOWER L.H. SIDE REAR, ON ENGINE 8 CYLINDER - ON LOWER L.H. SIDE FRONT, ON ENGINE
C-231 FUEL GAUGE ▲ 14401 68 BK-W ON BACK OF I/P CLUSTER ABOVE SPEEDOMETER
C-232 ▲ 14407 266 O ▲ 14401 266 O ▲ 14407 266 O NOTE-14407 FOR DUAL FUEL TANKS ON BACK OF I/P CLUSTER ABOVE SPEEDOMETER ▲ FUEL GAUGE
C-233 14405 14401 282 GR 285 BR 266 O 283 Y-BK 285 BR 266 O 283 Y-BK LEFT SIDE OF DASH PANEL ENGINE COMPARTMENT SIDE
C-234 14405 FUEL TANK ▲ 57 BK SENDER 266 O BELOW REAR CROSS MEMBER, ON FRONT FACE OF FUEL TANK
C-235 FUEL TANK SELECTOR SWITCH 14407 ▲ 266 O BLUE BEHIND INSTRUMENT PANEL, LOWER L.H. SIDE
C-236 FUEL TANK SELECTOR SWITCH 14407 ▲ 266 O BEHIND INSTRUMENT PANEL, LOWER L.H. SIDE
C-237 FUEL TANK SELECTOR SWITCH 14401 ▲ 29 Y-W BEHIND INSTRUMENT PANEL, LOWER L.H. SIDE
C-238 14401 14406 29 Y-W ▲ 29 Y-W SENDER L.H. SIDE OF ENGINE COMPARTMENT NEAR DASH PANEL
C-239 FUEL TANK ▲ 14405 57 BK SENDER 29 Y-W LEFT REAR SIDE OF VEHICLE, ON REAR FACE OF FUEL TANK
C-240 14401 IGNITION SWITCH 984 GR-R 32 R-BL 32 R-BL 16 R-GR E1 Y BEHIND INSTRUMENT PANEL, RIGHT OF STEERING COLUMN
C-241 IGNITION SWITCH 14401 ▲ 697 BK-GR BEHIND INSTRUMENT PANEL, RIGHT OF STEERING COLUMN
C-242 IGNITION SWITCH 14401 ▲ 977 P-W BEHIND INSTRUMENT PANEL, RIGHT OF STEERING COLUMN
C-243 14405 14401 140 BK-R 977 P-W 977 P-W 977 P-W 977 P-W L.H. SIDE OF ENGINE COMPARTMENT NEAR DASH PANEL
C-244 14431 STARTER MOTOR ▲ BLACK LOWER R.H. SIDE OF ENGINE
C-245 14289 932 BL 932 BL IN ENGINE COMPARTMENT, NEAR CENTER OF DASH PANEL
GROUND CODES
G-201 AT ALTERNATOR REGULATOR MOUNTING SCREW
G-202 IN ENGINE BLOCK NEAR ALTERNATOR
G-204 IN 14405 ON REAR CROSS MEMBER NEAR CENTER
G-205 IN 14406 ON REAR MOUNTING BRACKET OF FUEL TANK
SPLICE CODES
S-201 IN 14405 NEAR STARTER MOTOR RELAY
S-202 IN 14401 NEAR TAKEOUT TO IGNITION SWITCH
S-203 IN 14401 NEAR TAKEOUT TO IGNITION SWITCH
S-204 IN 14401 NEAR TAKEOUT TO IGNITION SWITCH
S-205 IN 14401, NEAR T/O FOR 14289
1974 BRONCO
PAGE 2 OF 4
LOCATION NUMBERS 1 THROUGH 16