Bronco Steering Wheel Installation Instructions

Step 1: Remove your old steering wheel. You may need a steering wheel puller. One can be rented (for free) from your local auto parts store.

Step 2: Purchase the correct GRANT steering wheel adapter from your local auto parts store. If you are replacing your stock steering wheel you will need this adapter. If you are replacing an aftermarket steering wheel you may not need this adapter.
1966-1974 Part number 3294
1975-1977 Part number 3285


Step 3: Install the GRANT adapter over the steering shaft splines. Make sure to install the two turn signal canceling cams as shown below.




Step 4: Align the cover with the three holes as shown below:



Step 5: Install the aluminum adapter next and align the three holes with the cover and the GRANT adapter. Fasten the 3/4” bolt to the steering wheel shaft.

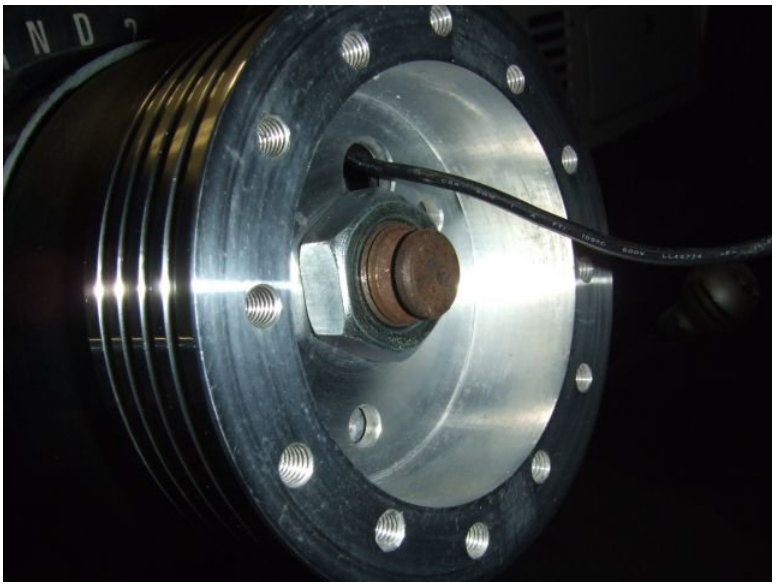

Step 7: Bolt the three 7/16” bolts into the GRANT adapter.

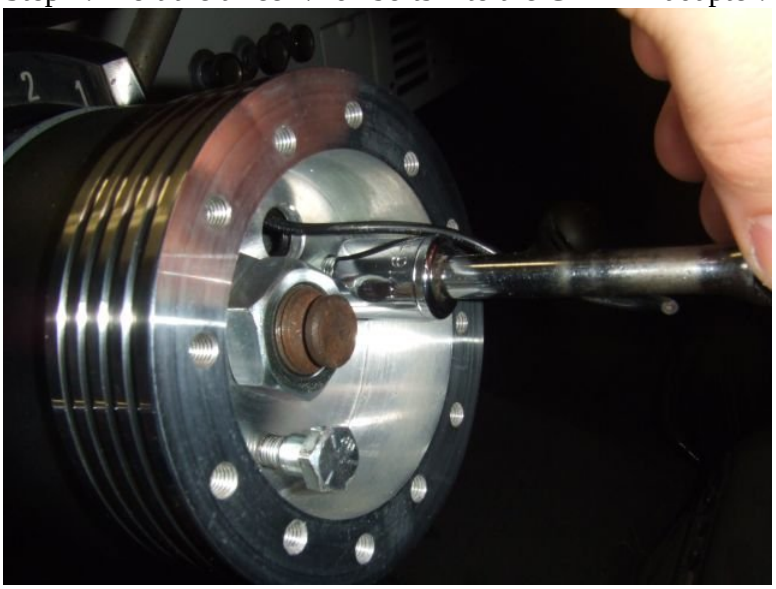

Step 8: Line up the steering wheel with the six holes on the aluminum adapter. Fasten the steering wheel to the aluminum adapter using the six alen head bolts provided in the kit.

