Wiring Connections for FiTech Go EFI System with Conventional Distributor w/Timing Control

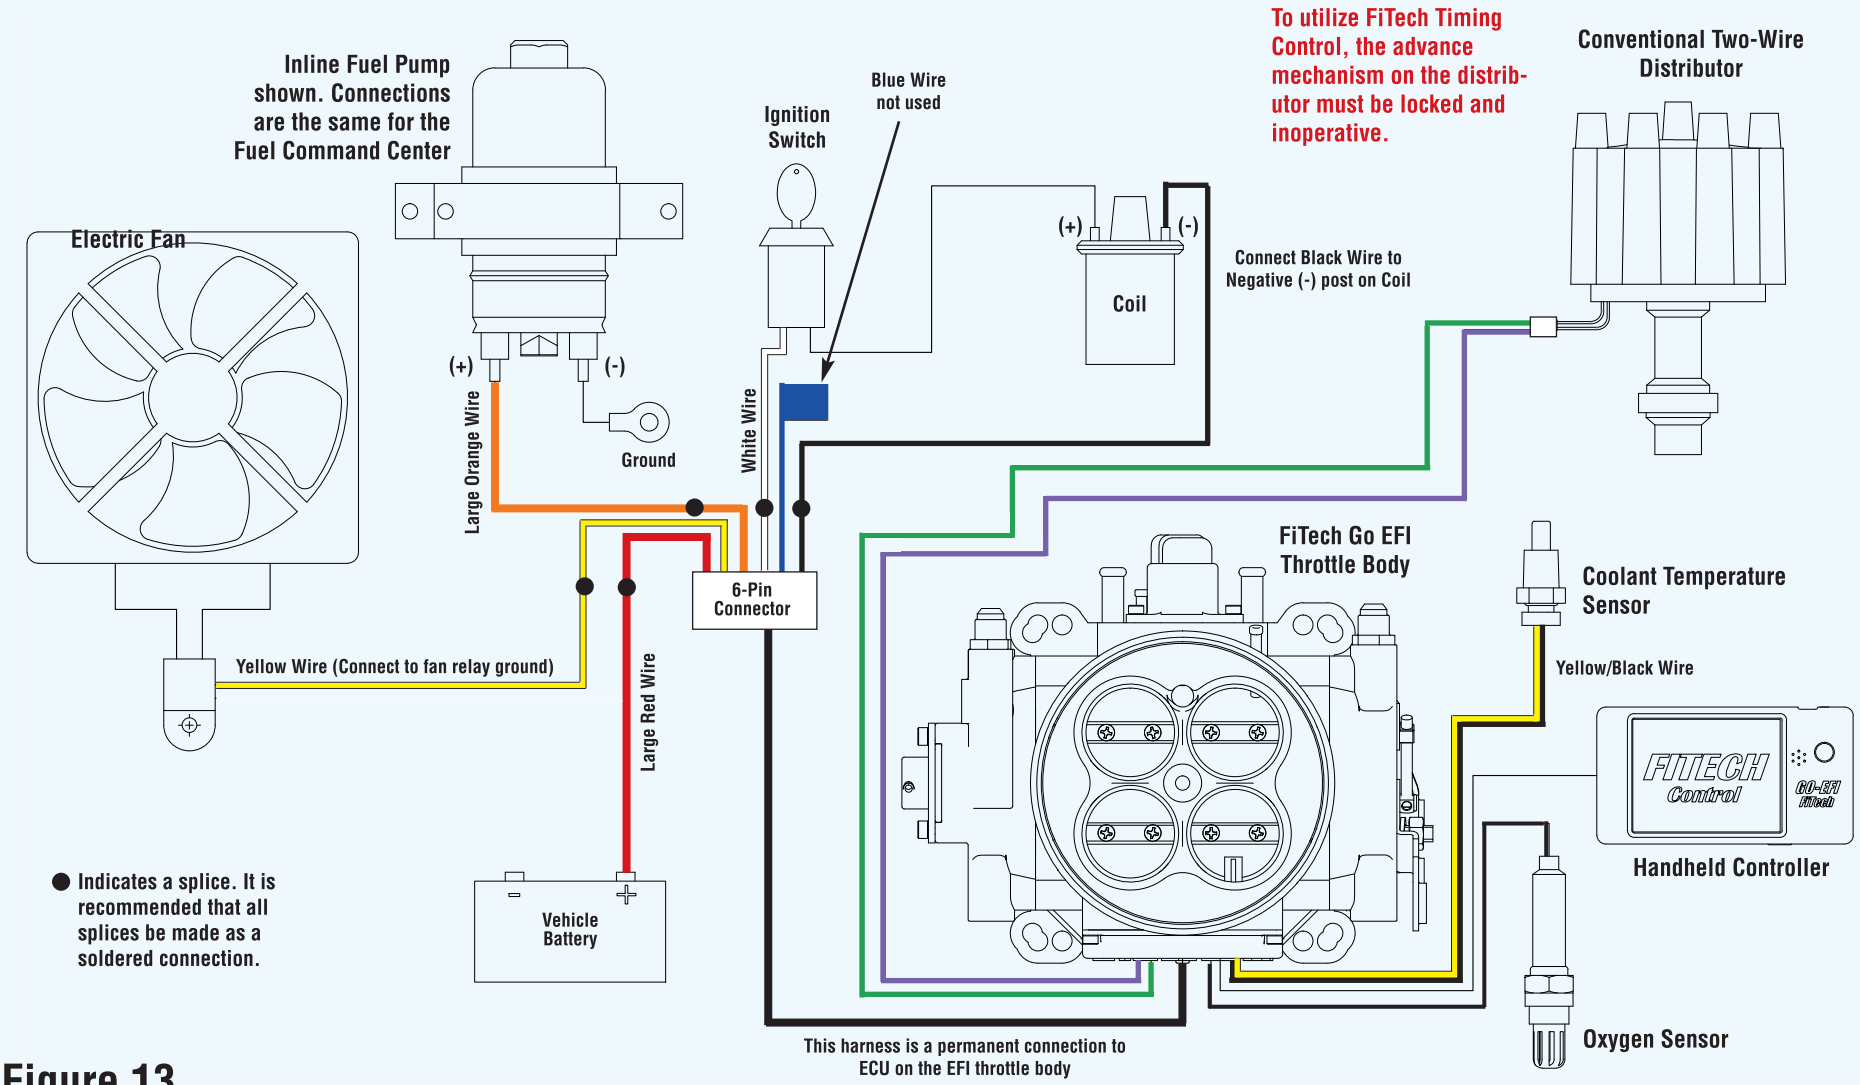


Figure 13

Use this wiring schematic if you are utilzing a conventional two-wire distributor without an external CDI box, such as a MSD 6AL or similar aftermarket ignition box, and you want to use the FiTech Timing Control. Note that your mechanical advance mechanism must be locked to use Timing Control.